



## POWER DRILL ADAPTER SAFETY INSTRUCTIONS:



**The following are critical safety precautions for using the adapter.**

1. Always ensure that others are safely away from the trailer when raising or lowering the lift.
2. Make sure the tent is properly stowed and all other components are clear of the rack when in motion.
3. Use a variable speed rill. When using a cordless drill, make sure it is at least an 18V.
4. Brace yourself as the torque WILL be significant and can cause injury (or death).
5. If possible, brace the drill handle against the trailer frame to carry some of the torque load and prevent the drill from spinning around.
6. Pull trigger gently and slowly to start. Abrupt starts will be hard to control.
7. Do not raise the rack too high. The gnarled indicators on the Lift Tube will indicate when to stop.