



Tent Pod Latch Alignment



Step 1: The rear latches on the tent pod can be laterally adjusted. Open the pod slightly to visualize how the latch closes. The striker bolt should fall as close as possible to the center of the lower latch bracket.

Step 2: The upper bracket has a slotted hole for laterally adjusting the position of the striker bolt. Be sure to tighten the bolt securely once it is in proper alignment with the lower latch bracket. Note: As the pod closes, the fit of the shells may draw the latches to one side or another. Check alignment with the pod closed as much as possible.

Step 3: Check that the fore / aft location of the striker bolt is correct. The latch should contact the bolt between the head and base washer as shown.

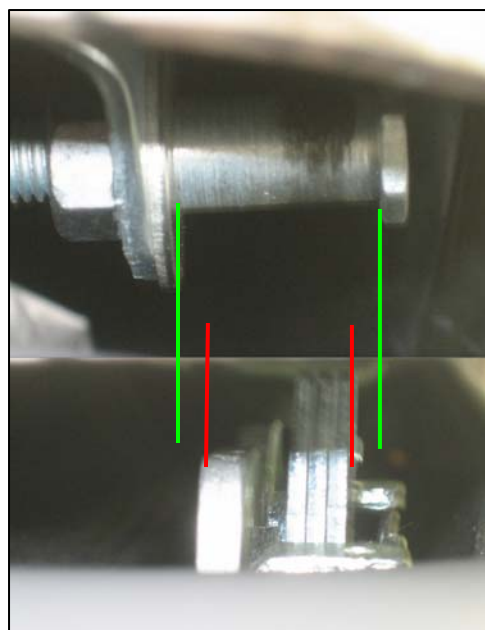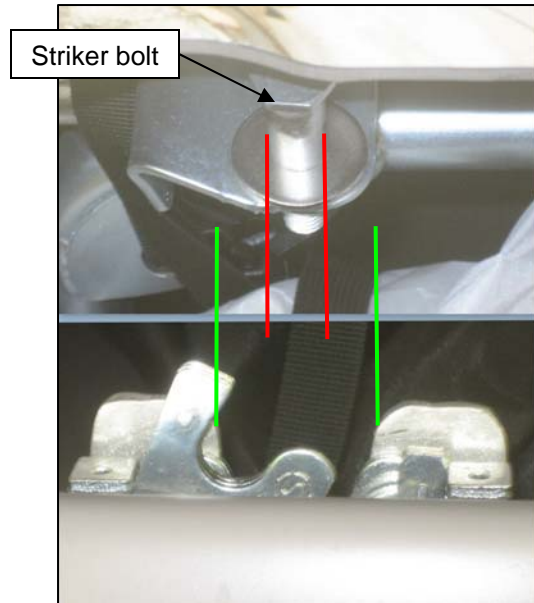

Step 4: To close pod, be sure to apply pressure at points marked with arrows. Two distinct clicks should be heard for each latch (two on the left and two on the right). It is often easiest to work back and forth to overcome the friction between the pod shells.

If you have further questions regarding the pod latch alignment please contact SylvanSport Customer Service at 828-883-4292.

