



GO Side Tube Vent Instructions

(Prevents water from accumulating in side tubes)



This is the area to be addressed.

Step 1: Drill a 1/4" hole in each of the 4 lower metal arcs. This hole should be roughly 1" above the deck, and should only go through one side.

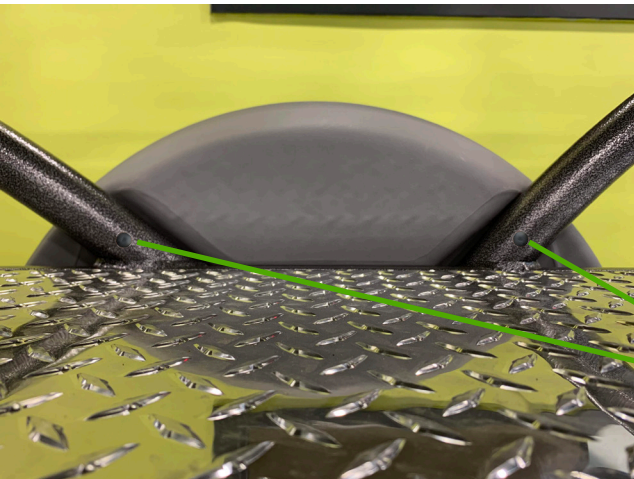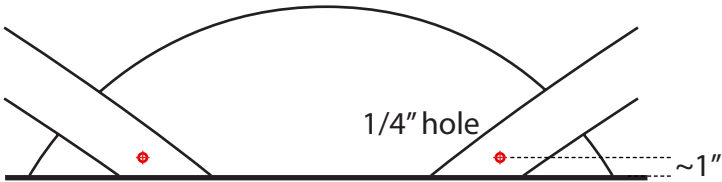

Step 2: Press a pine tree clip into each of the 4 holes.

