


GO Easy Kickstand Installation

Parts and Tools Required

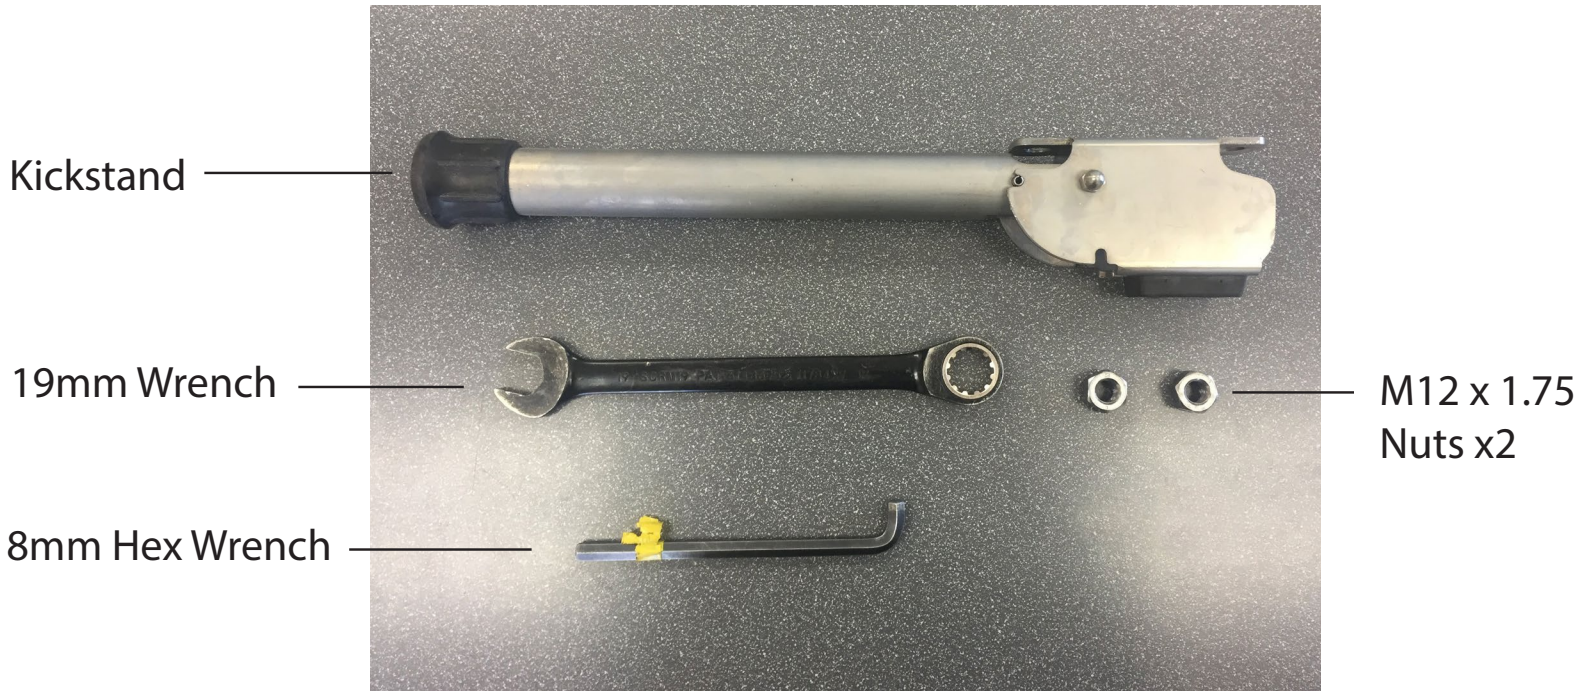

1

Prop up the GO Easy tongue and locate the two bolts attaching the bracket to the coupler.



2

Use both wrenches to remove the nuts and washers on both bolts, and set the bracket aside.



3

Apply some grease to the new nuts. Place the kickstand under the tongue and fit the two bolts into the two top holes in the orientation shown. Put the washers and the new nuts onto the bolts.

Note: Be sure not to put the old nuts back on the bolts.



4

Ensure that both nuts are tight. The kickstand can be retracted by pulling down and then back.

