


The SylvanSport GO tongue extension is great for towing longer boats and canoes. The extra 30 inches of tongue length provides plenty of bumper clearance when hauling a boat up to 18' long.

Items included in Tongue Extension Kit:

- | | |
|----------------------------------|---------------------|
| Tongue Extension Tube (1) | 7" Zip Tie (1) |
| M12 Hex Nut (2) | M10 Bolt (1) |
| M12 Flat Washer (2) | M10 Flat Washer (2) |
| M12 x 100mm Button Head Bolt (2) | M10 Hex Nut (1) |
| Wire Harness Extension (1) | |

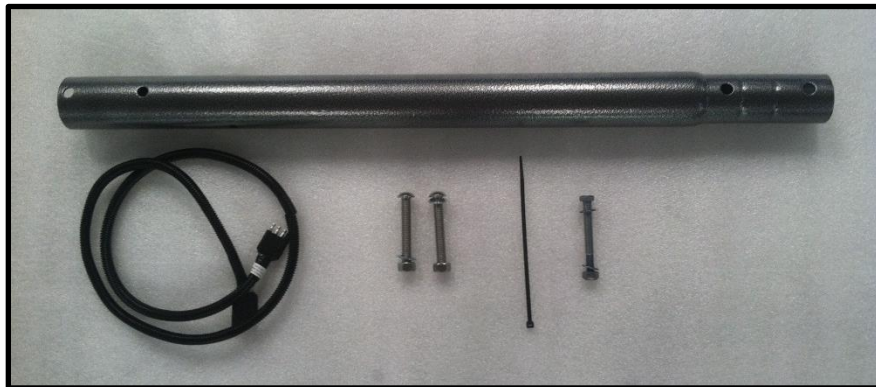

Tools and other items required for installation:

- Electrical Tape
- 8mm Hex Key
- 19mm Socket Wrench (or standard wrench)
- 17mm Socket Wrench (or standard wrench)
- Torque Wrench
- Dead Blow Hammer (not shown)







Step 1: Remove Safety Cables from tongue using 6mm hex key. Hex head bolt can be reinstalled in the holes rather than leaving the holes exposed if you prefer.



Step 2: Remove Coupler using 8mm hex key and 19mm socket wrench.

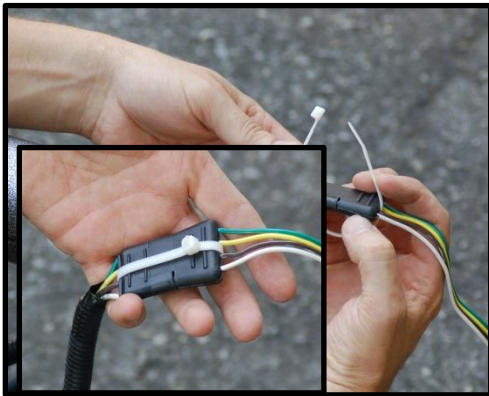

Step 3: Attach Wire Harness Extension to existing connector. Secure using Zip-Tie.

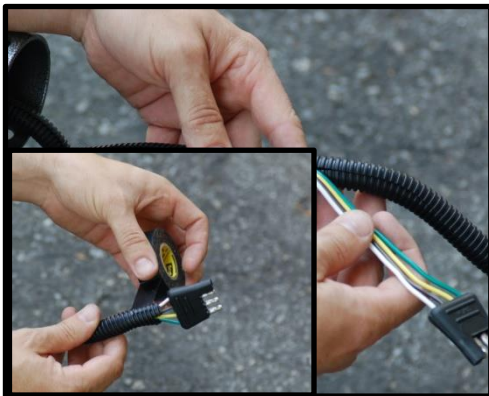

Step 4: Wrap cable with Flexible Conduit. Secure with electrical tape.



Step 5: Thread Wire Harness Through Tongue Extension.



Step 6: Slide Tongue Extension into existing tongue (larger holes facing upward). Be sure the inside of the existing tongue is clean and smooth so the tongue extension will slide more easily.



Step 7: Push the Tongue Extension in until the bolt holes on the bottom of the Tongue line up. It may be necessary to place a wooden block at the end of the Tongue Extension and hammer it to get it fully into place.



Step 8: Insert M12 bolts. Flat washer and Hex Nut are installed from below. Tighten to 40 ft-lb (54 Nm).



Step 9: Reinstall coupler on tongue extension using removed M12 bolts, washers and hex nuts. Tighten to 20 ft-lb (27 Nm).



Step 10: Reinstall Safety Cables onto the Tongue Extension using M10 bolt, 2 washers, and M10 nut.



Step 11: Completed assembly... ready to GO!