



## Bed Frame Snap Ring Retaining Clip Repair



The above pictures show the Bed Frame as it is positioned on the GO.



The bed frames attach to the side frame with a retractable pin, located on the bottom of the bed frame mounting bracket on the rear (step) side of the GO.



When the bed frame is lowered, you will see two hex bolts that attach the mounting bracket to the bed frame.




Using a flat head screwdriver, depress the retractable pin to release the bed frame and remove it from the side frame.



You will now be able to see the retractable pin and the plastic spacer that holds the bed frame in place.



Using a 5 mm hex wrench, remove the bed frame bracket from the frame.

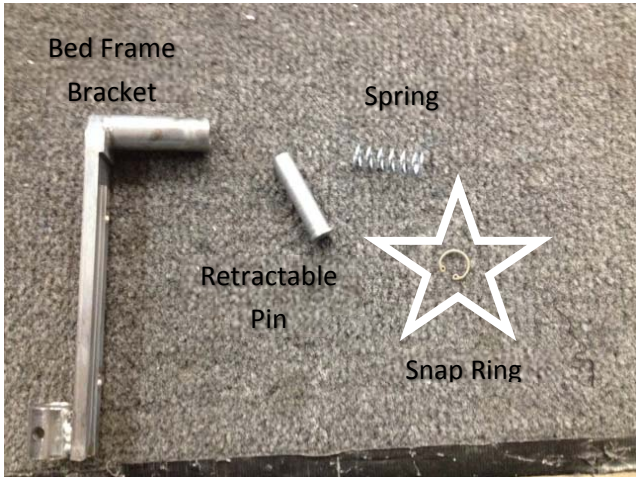

The disassembled bracket contains (in this order from the base) a retractable pin, a spring, and a snap ring.



Reassemble the bracket by inserting the retractable pin, sliding the spring on top.



Using snap ring pliers reinstall the snap ring. *There is a groove just inside the lip of the bracket where the snap ring should seat. Make sure the snap ring is fully secured within that groove.*



Properly seated snap ring.

The bed frame can now be reassembled. Repeat steps on the other bed frame.

Customer Support: 828-883-4292