

### Table/Bed Platform Installation & Use

Figure 1



This bulletin explains the proper installation and use of the table/bed platforms.

Included with your two table/bed platform panels are a new a new binding post, hex wrench, and packet of Loctite.

#### Replacing the table storage bar binding post

Rotate the table support bar in the ceiling of the GO so that the binding post is facing downward. Using the included 1/8" hex wrench and a flat head screwdriver loosen and remove the old binding post as shown in Figures 2 & 3.

Squeeze three drops of Loctite (included) into the new binding post and thread on to the screw, tightening with the hex wrench.

The new tables are now ready to be stored.

Figure 2

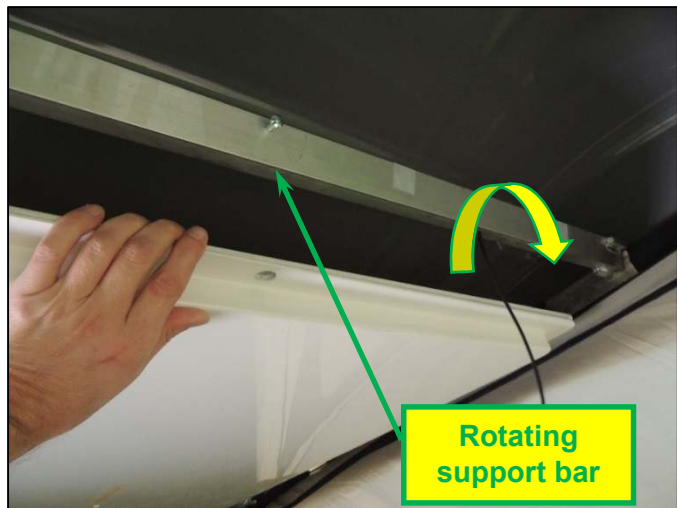


Figure 3



### Table/Bed Platform Installation & Use

Figure 4



Install the ratchet strap hook into the loop at the top of the back wall of the GO. Use the ratchet release to let out about 5' of strap.

Remove the thumbscrew from the back wall frame and rest one end of the table panel on the aluminum crossbar as shown in Figure 5.

Figure 5



Figure 6



Figure 7


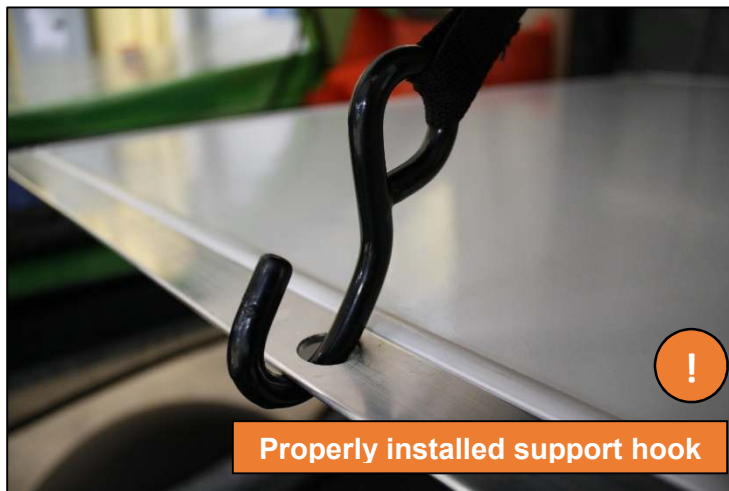


Figure 8

Place the hook on the end of the strap through the hole in the end of the table panel as shown in Figures 6 & 7 and rotate so the table panel hangs from the strap as shown in Figure 8.

## Table/Bed Platform Installation & Use

Figure 9

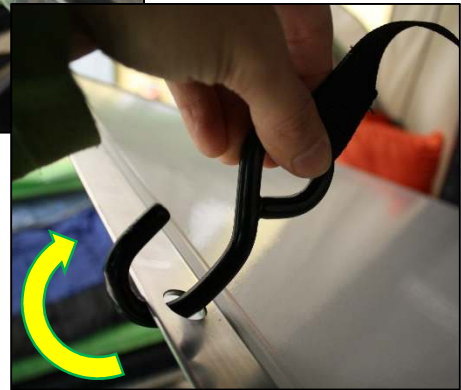

Once the hook is properly seated, use the ratchet to raise the table until it is level.

Install the thumbscrew that you removed earlier through the hole in the table support frame and back into the aluminum crossbar to secure the table.

To use the panels as bed supports, place both panels across the opening between the beds as shown in Figure 10.

The two small width mattresses that came with your GO may then be placed atop the bed support panels to create your bed.

Figure 10

